

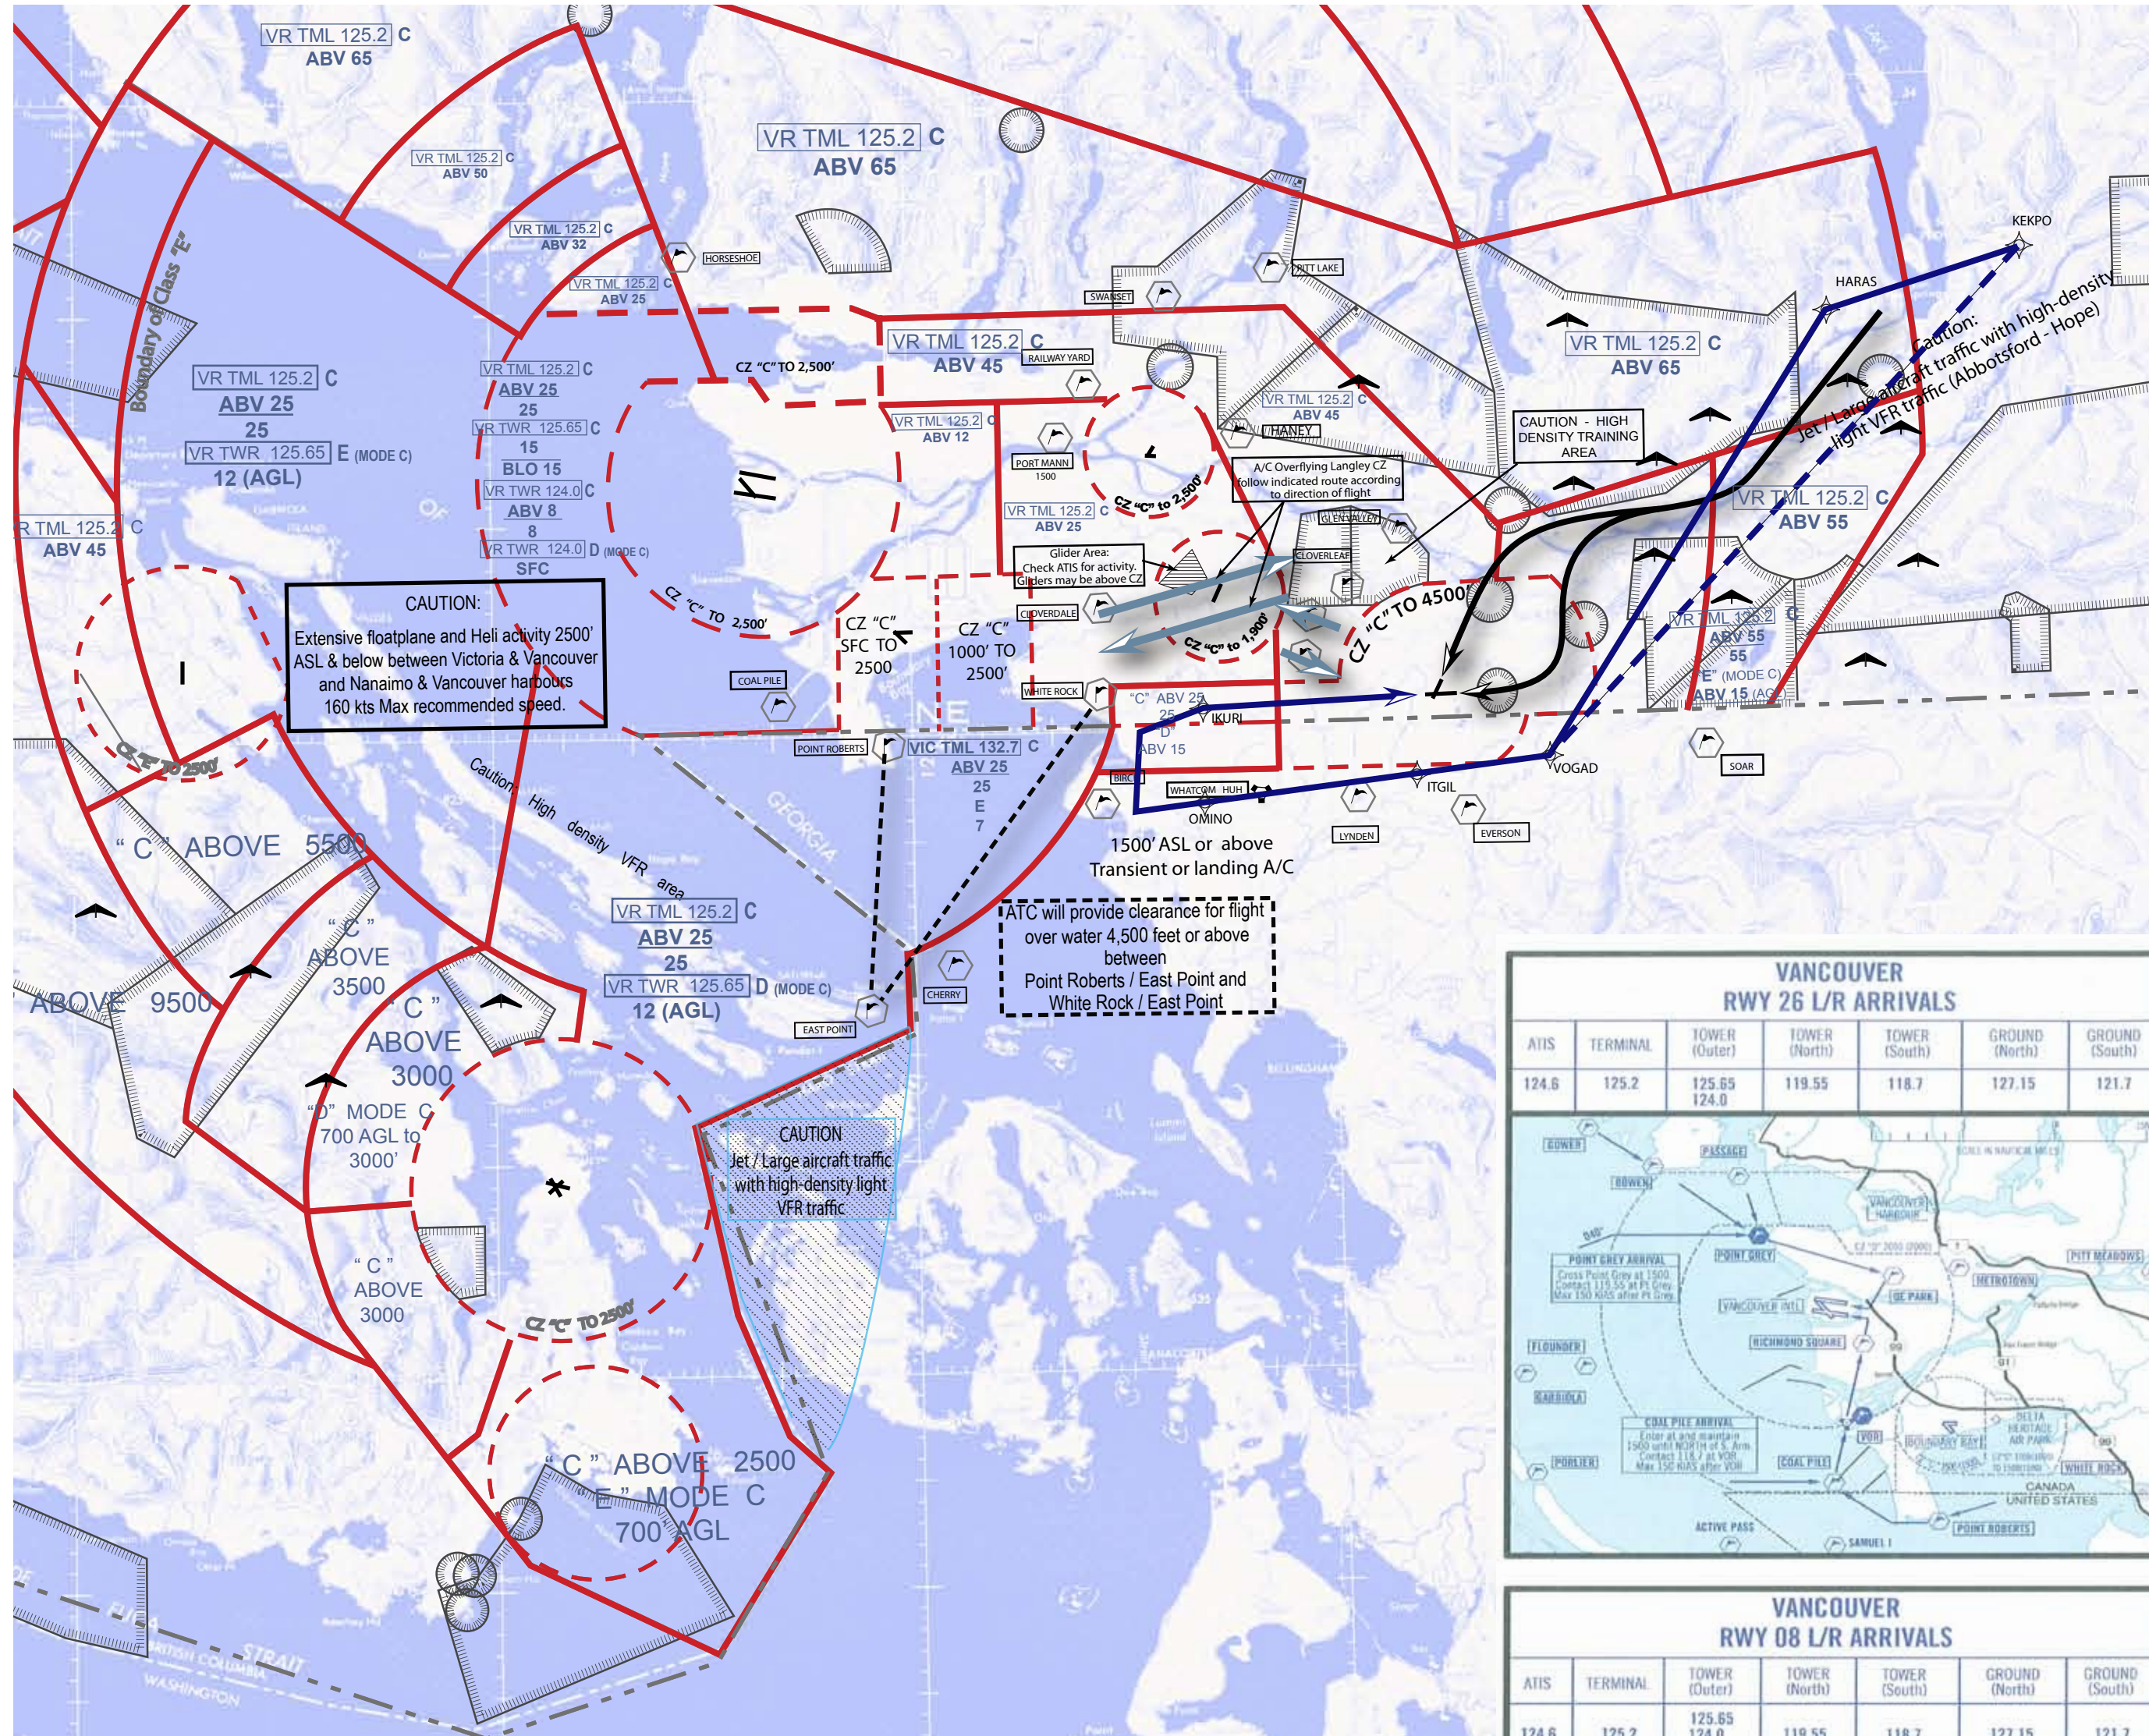
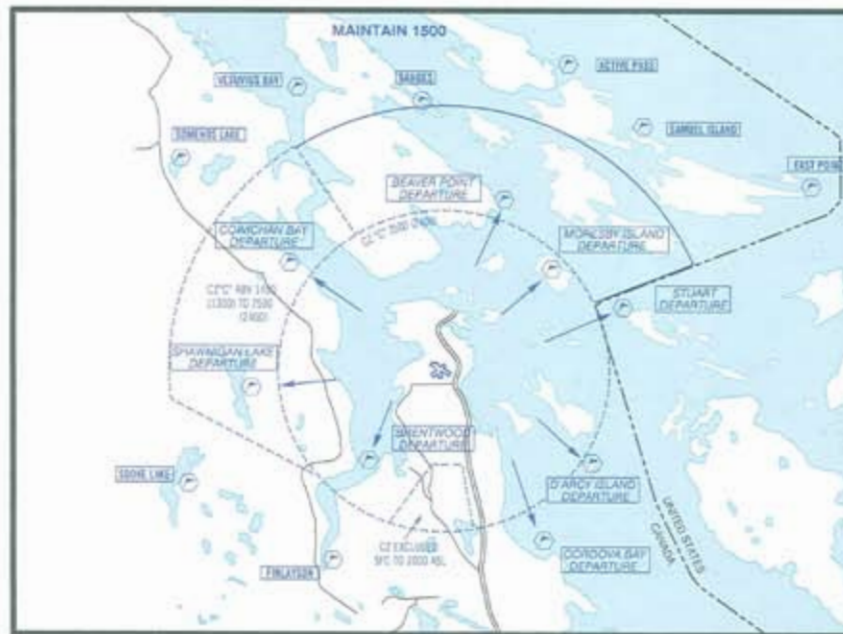
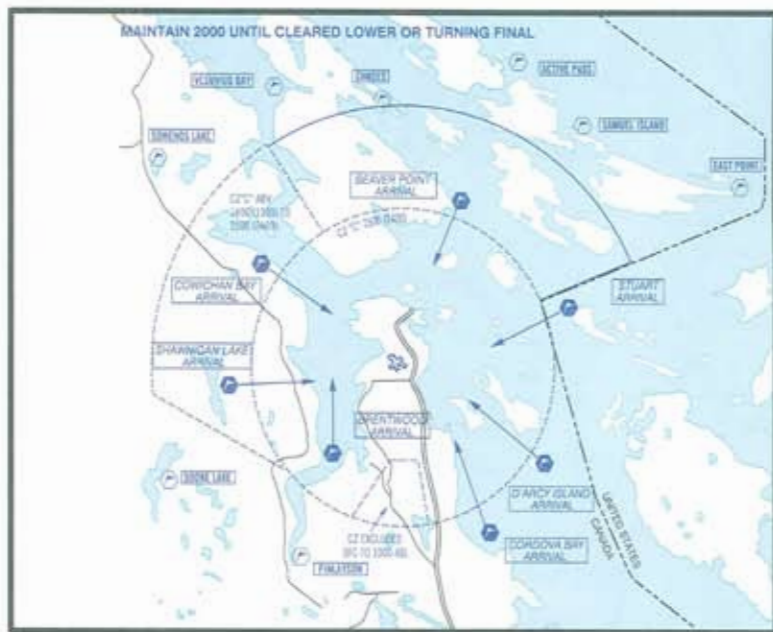
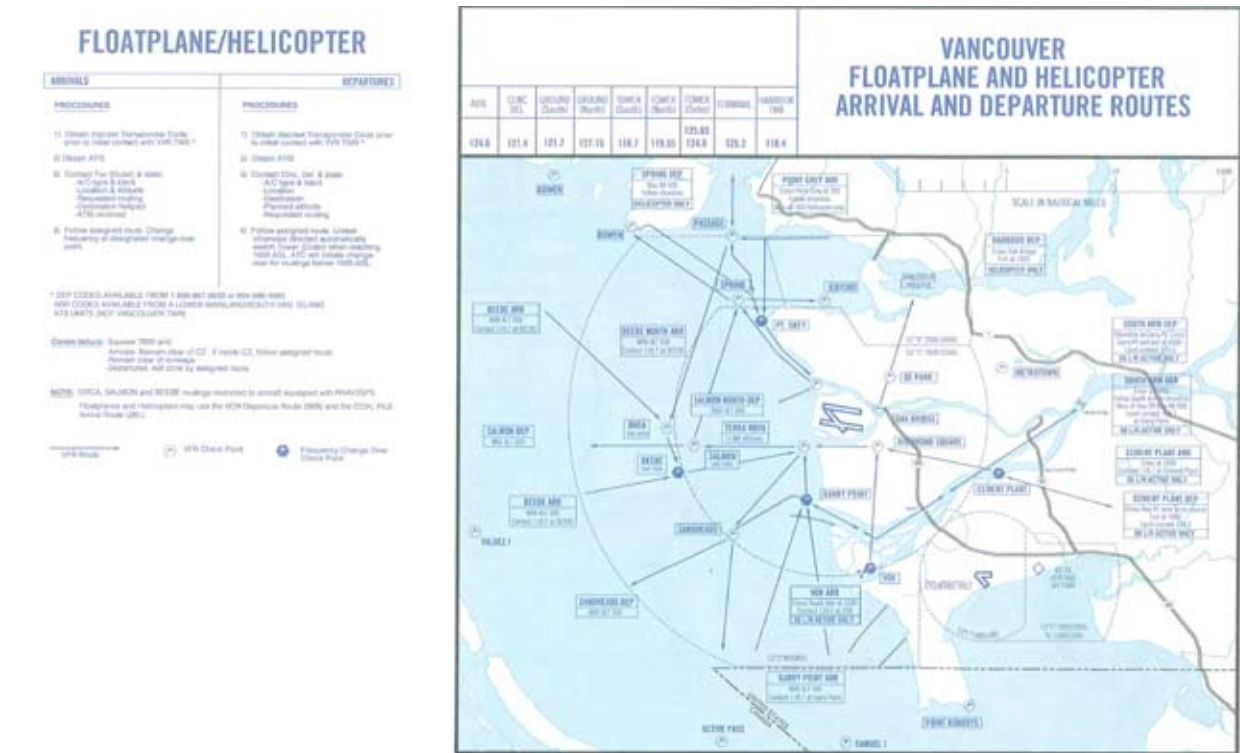


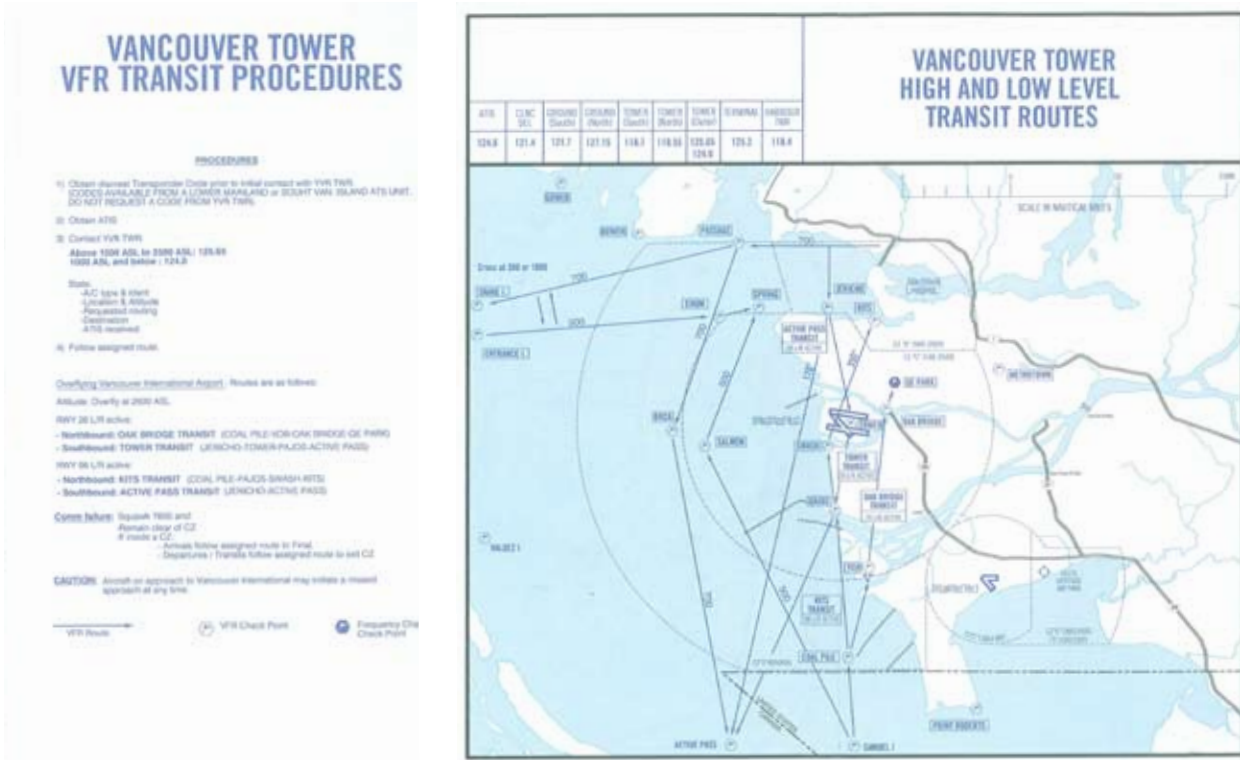

BOUNDARY BAY RUNWAY 07/12

ATIS	TOWER	GROUND
125.5	OUTER 127.6 INNER 118.1	124.3



O/T TFC 118.1 (MF)

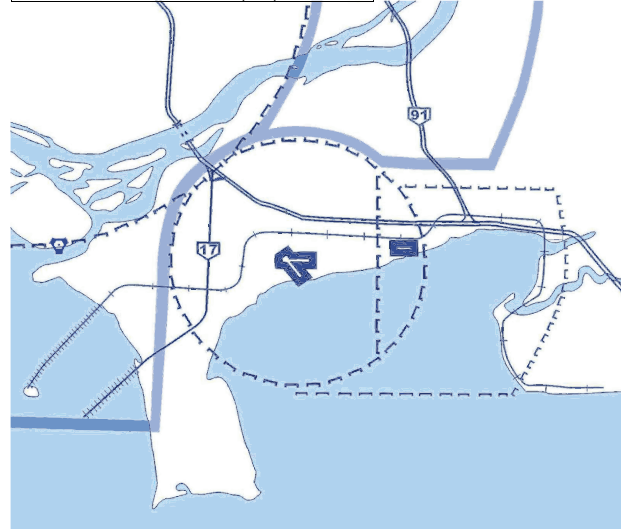

BOUNDARY BAY RUNWAY 25/30

ATIS	TOWER	GROUND
125.5	OUTER 127.6 INNER 118.1	124.3

O/T TFC 118.1 (MF)

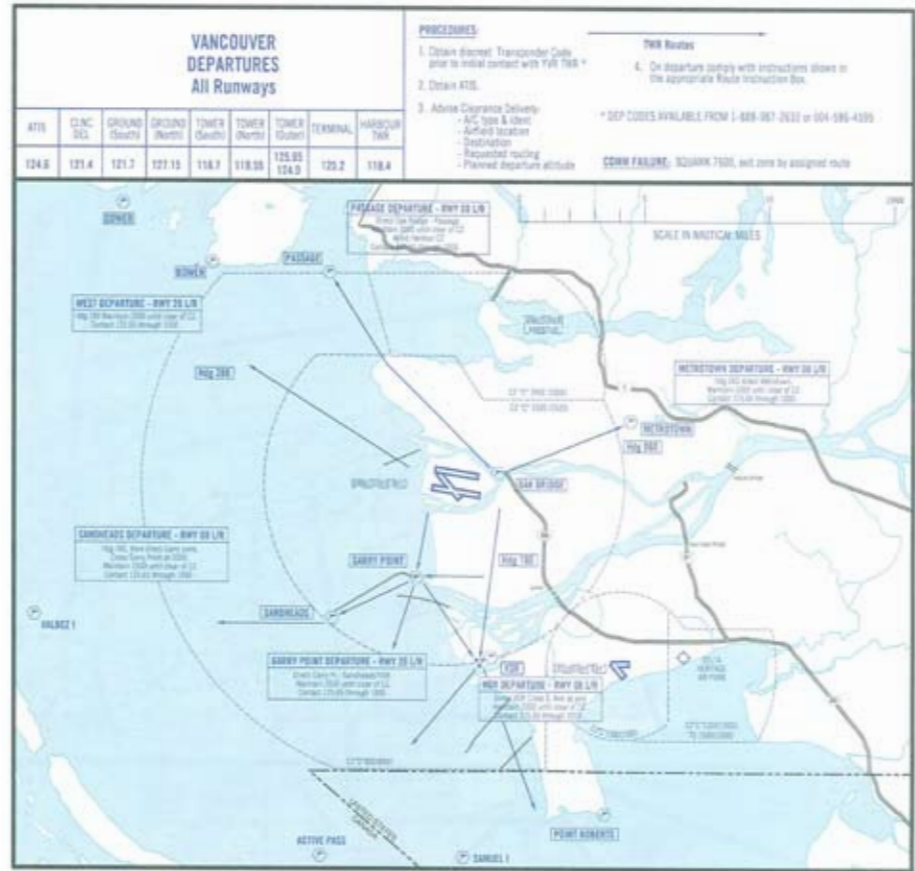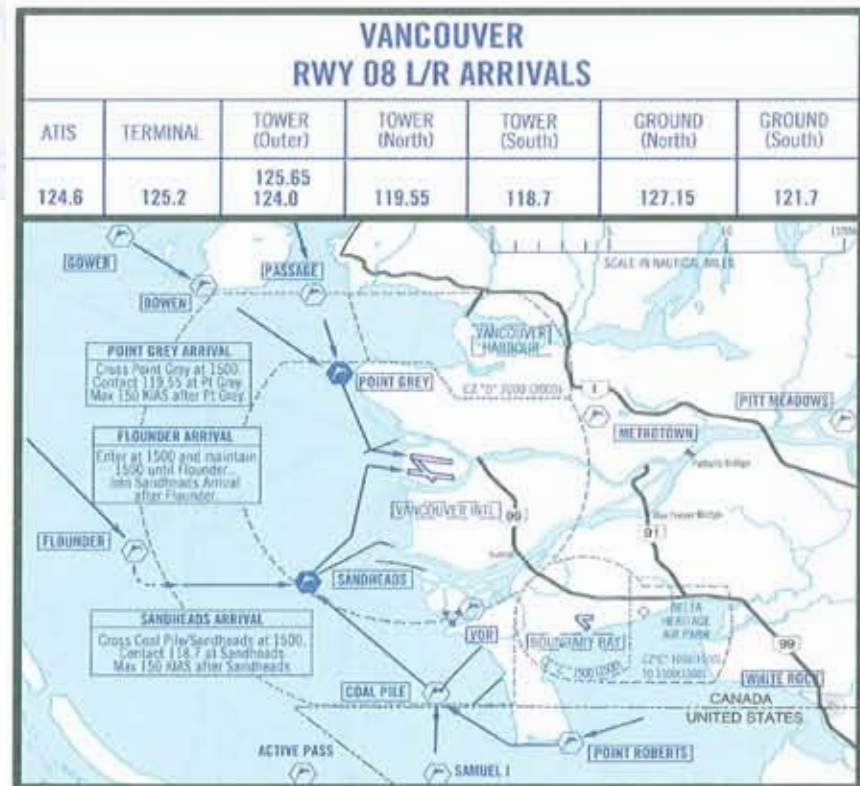

VANCOUVER ARRIVAL PROCEDURES

- PROCEDURES:**
- Obtain Tower Transponder Code prior to initial contact with VFR Tower.
 - Obtain ATIS.
 - At 2500 and below:
 - Contact TML 125.2 and squawk as assigned.
 - Heading and frequency as assigned.
 - 2500 and below:
 - Contact TWR 125.65.
 - Follow routing, altitude, and frequency changes as described in Route Instruction Box, or as cleared by ATC.
- COAL PILE ARRIVAL:** Enter at and maintain 1500 until NORTH of S. Arm. Contact 118.7 at VOR. Max 150 KIAS after VOR.
- FLOUNDER ARRIVAL:** Enter at and maintain 1500 until Flounder. Join Sandheads Arrival after Flounder.
- METRO TOWN ARRIVAL:** Direct Metrotown direct OE Park. Enter at and maintain 2000 until WEST of Metrotown. Cross OE Park at 1500. Join LEFT base RWY 12. Maintain 1500 until final. Contact 118.7 at OE Park.
- POINT GREY ARRIVAL:** Cross Point Grey at 1500. Contact Tower (as assigned) at Point Grey. Max 150 KIAS after Point Grey. Join downwind north at Fraser River when 2000 active.
- SANDHEADS ARRIVAL:** Cross Coal Pile/Sandheads at 1500. Contact 118.7 at Sandheads. Max 150 KIAS after Sandheads.
- * ARR CODES AVAILABLE FROM A LOWER MAINLAND/SOUTH VAN. ISLAND ATS UNIT (NOT VANCOUVER TWR)

